


Nightlock Lockdown #2

You can use this printable "SIZING GAUGE" to measure your Metal Door Frames

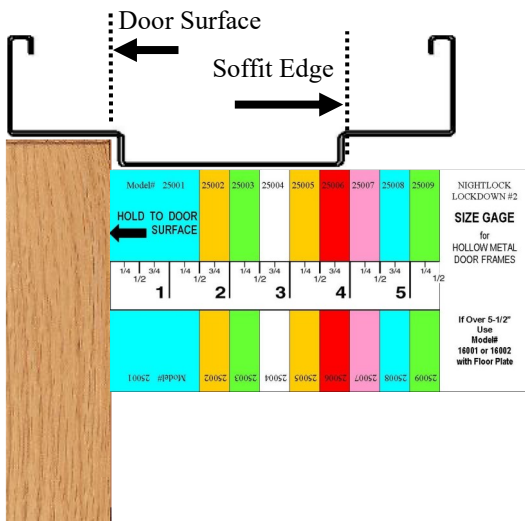

WARNING:

WHEN PRINTING THIS SIZE GAUGE PAGE:

Set your printer to "Actual Size or 100%" in the "printer options". Then cut out & trim the size gauge. Then double check that the gauge printed accurately with a tape measure before using.




Before measuring (Make sure door is resting in its closed natural hanging position) Sometimes doors may be bowed or warped , so be sure to measure each door.

Hold the BLUE END of the SIZE CARD to the closed door surface, near the bottom of the door, where you will be installing the Lock-down device. Then measure from the closed door surface to the outer edge of the door frame soffit, then note the corresponding Model #.

EXAMLE : If the Soffit edge is with-in the red zone, You will choose Model # 25006.

If the Soffit edge is on a line between colors, you can use the smaller size. If it is over the line, choose the next larger size.

Contact or Questions? Please Call 855-644-4856

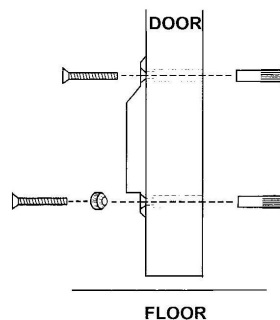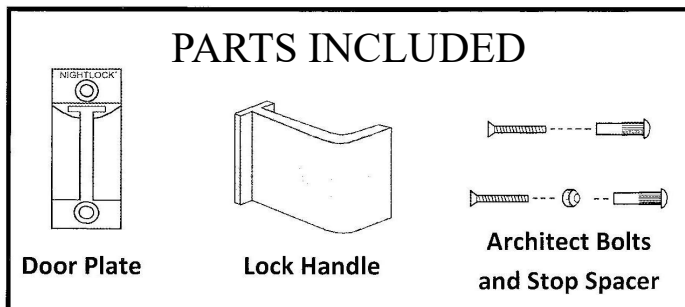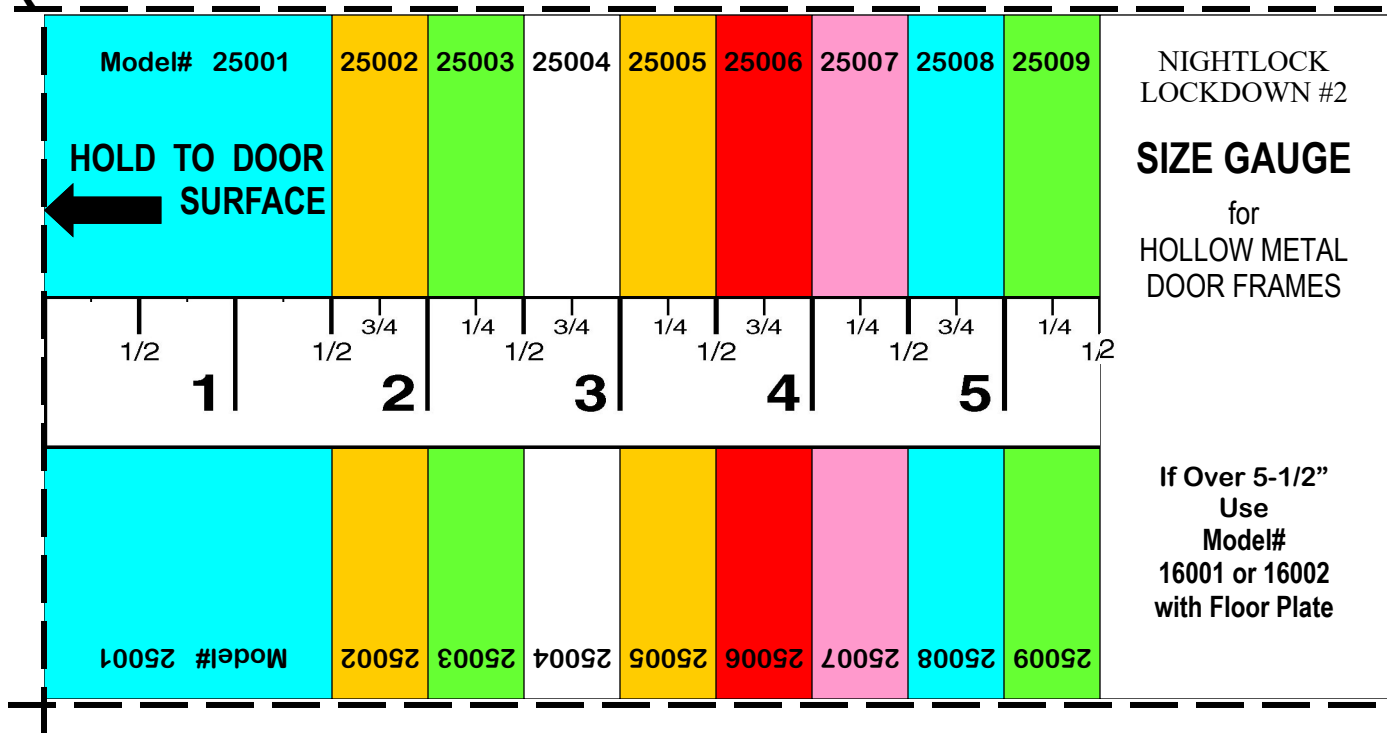

The Door Bolts (Binding Posts) are fire wall compliant. They go all the way through the door, with a tamper resistant rounded head on the outside of the door.

All fastening hardware is included with locks.

See Easy to install instructions on the installation page at www.nightlock.com
We have installation services available if needed. (required minimum of 50 doors)